

R4151-1411.5 MAINT (#12-WITH 15) BRIVE (#11.5 GRAY)
R4151-1611.5 MAIN (#16 BLUE) DRIVE (#11.5 GRAY)
R4151-1811.5 MAIN (#18 YELLOW) DRIVE (#11.5 GRAY)
R4151-2011.5 MAIN (#20 RED) DRIVE (#11.5 GRAY)
R4151-2213 MAIN (#22 GREEN) DRIVE (#13 BLACK)
R4151-2413 MAIN (#24 BLACK)

DRIVE (#13 BLACK)

MAIN (front)

Full Circle, MAIN/DRIVE NOZZLE SET

Installation Instructions

Step 1 R

REMOVE OLD NOZZLES

Unscrew old brass

MAIN (front) and

DRIVE (rear) nozzles
from nozzle base.

Step 2

INSTALL NEW NOZZLES

Screw on **MAIN** (**front**) FCI nozzle with proper orientation.

Screw in *DRIVE* (*rear*) FCI nozzle with proper orientation.

Step 3

RE-INSTALL NOZZLE BASE

in conversion assembly with cap.

DRIVE (rear)

UNDERHILL • 6 JOURNEY #140 • Aliso Viejo, • CA 92656 www.underhill.us 1-866-UNDERHILL